

# Secure Sign II

## User Manual v1.1

### DEVICE CHARACTERISTICS

- innovative display with capacitive touch-panel and flat for signature capture biometric signature
- equipment intended for modern banking centers
- provides electronic identification of a person, biometric signature, and objective verification sophisticated
- it offers complete computerization of processes and business cases, leading to significant savings
- expedite the handling of the client, provide greater comfort and discretion
- allows you to present advertising, news Institutions - texts, documents, videos
- offer of institution is displayed online

### SIGNATURE AREA

- select from the menu the natural operating by fingers
- easy zooming, rotating, scrolling text and images by multitouch
- the touch panel and the signature area work independently
- signing of documents by electronic pen (battery-free)
- signature could be verified by sophisticated software, not by the staff of the institution, ensuring accurate identification and verification of the client, which reduces errors and speeds up the process





**Multi Touch**



**Relation**




**Zooming**



**Scrolling**



**Signature**

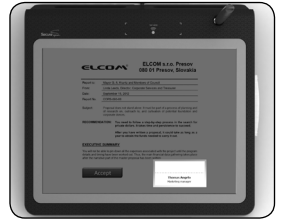

**Privacy filter**

## TECHNICAL PARAMETERS

IP level	IP 54 front frame – excluding pen holder and chip card reader)
Cooling	passive, fanless
Display type	PCT, Multi-touch
Diagonal	9,7"
Backlight	LED
Resolution	1024 x 768 px
Aspect ratio	4:3
Luminous intensity	600:1
Horizontal point of view	178°
Vertical point of view	178°
Technology	electromagnetic resonance
Pen	without battery
LPI	2540
The pressure level	1024
Input for display	USB
Input for touch display	USB
Input for digitizer	USB
Card reader OMNIKEY 3121	USB (option)
Contactless reader	USB (option)
Mounting	on a desk (0°-15°)
Dimension (L x W x H)	243mm x 224mm x 53mm
Relative humidity	5 % ~ 95 %, (no condensation)
Operating temperature	0°C to +40°C
Storage temperature	-10°C to 70°C
Compatible with OS	Windows 10, 11

## IMPORTANT NOTICES

Please pay attention to the following notices. They will help you to avoid possible damage of the device and potential injury which could result from improper use of the device. Due to damage to the device caused by non-observance of the procedures mentioned in these notices, the legal warranty expires due to improper handling with the product.

- Install the product in a place where it will not be exposed to direct sunlight, unusual changes in temperature (below 0°C and over 45°C) or high humidity. Installation in an unsuitable place could cause damage to the casing and electrical components.
- When moving device from a cool environment to a warm one, or vice versa, do not switch it on for at least 30 minutes.
- When handling the device do not lift the device for top part of but for the lower part.
- Do not insert anything else to the card reader slot but the card.
- The product can not be operated by a person with wet hands. Water could penetrate to the interior and cause damage to the parts.
- Clean the external surface of device with a soft, dry cloth. Never use caustic detergents. The usage of such chemicals could lead to damage to the device. Do not clean the device with pouring water and do not sink the device in to water.
- If the device is not working properly, turn it to an authorized service center. Do not attempt to repair the device yourself. Do not open the device!
- Before using the device, install the installation package which you can download by using this link:  
[@j • KQ , , É|&{ È~ D} D~ \] \] \[ ; D & @ 3 a E ~ \] \] \[ ; D a } æ ; ^ È a | ^ o D ^ & ; ^ È a } KQ FFJJG](#)
- **Notice:**
  - The use of sharp objects for operating the touch panel can cause serious damage or destroy the touch panel.
  - Electronic equipment can produce interference and connected in the same power circuit, can cause the improper functioning of the device. In such case, use special anti-jamming aids recommended by the producer.
  - If you do not plan to use the device, turn off and unplug the device from source of power. Do not leave the switched on device unattended!
  - If the device is used in different ways than described in these instructions producer or the dealer cannot be responsible for any possible damage that may result.
  - The guarantee expires when the warranty period, in case of further encroachment into the device (violation of seals), destroyed unit by natural disaster, disorder in the distribution network and so on.

Á  
Á  
Á  
Á



A symbol (a crossed-out waste basket) on the product or on its packaging indicates that this product, upon completion of its use, should not be treated as common household waste. Instead it should be handed over to a special take-back scheme for the recycling of electrical equipment and electronic components. By ensuring the proper disposal of this product, you will help preserve natural resources and will help prevent potential negative consequences on the environment and on human health.

