

<p><b>POS Terminal Model P600 Counter Top User Manual</b></p>	<p>Thanks for your purchase of Product Description. Please read this guide first before you use the device, and it will ensure your safety and the proper use of equipment. About the equipment configuration, please check with the relevant contracts of the device or consult the seller who sells the equipment to you.</p> <p>The pictures in this guide are for reference only, if some pictures do not match the physical product, please in kind prevail. Many network function which is described in this manual is the specific service by the network service providers. Whether use these functions, it depends on the Internet service provider who services for you.</p> <p>Without the company's permission, anyone should not use any forms or any ways to copy, excerpts, backup, modify, spread, translated into other languages, all or partly used for commercial.</p> <p><b>Indicator icon</b></p> <ul style="list-style-type: none"> <li> Warning: may hurt themselves or others</li> <li> Caution: may damage your equipment or other devices</li> <li> Note: the annotations, use hints or additional information</li> </ul>	<p><b>To know the product</b></p> <p><b>Front</b></p> <p>Printer cover Charging indicator ON/OFF key IC card slot Home key Recent key Contactless sensing area Magnetic card swipe area Return key</p> <p><b>TOP</b></p> <p>RS232 USB DC interface LAN</p>	<p><b>Quick start guide</b></p> <ol style="list-style-type: none"> <li>Open the back cover.</li> </ol> <ol style="list-style-type: none"> <li>Install SIM card, SAM cards and SD card with your preference.</li> </ol>
<p><b>Change Paper roll</b></p> <p>Open the printer cover as shown, replace the paper roll and close the printer cover.</p> <p><b>Power the device</b></p> <p>Connect the corresponding cables according to the mark on the machine. Only use the company matching adapter and cable. Using the adapter or cable without permission will cause the damage of the equipment. In the condition of power, device LED light shows red.</p> <p><b>Boot/Shutdown/Sleep/Wake up the machine</b></p> <p>When you boot up the device, please press the on/off key in the top right corner. Then wait for some time, when it appears the boot screen, it will lead the progress to complete and go into Android operating system. It needs a certain period of time at the beginning of the equipment initialization, so please kindly wait for it patiently. When shutdown the device, holding the device in the top right corner of the on/off key for a while. When it shows the shutdown options dialog box, click the shutdown to close the device.</p>	<p><b>Troubleshooting</b></p> <p>After pressing the power button, the device is not on.</p> <ul style="list-style-type: none"> <li>• It is unable to power on device when the adapter is not connected to device well, please reconnect.</li> <li>• It is unable to provide power supply when the adapter is damaged, please replace it.</li> </ul> <p><b>The device shows network or service error message</b></p> <ul style="list-style-type: none"> <li>• When you're in the place where the signal is weak or receiving badly, it may be lost the absorptive capacity. So please try again after moving to other places.</li> </ul> <p><b>Touch screen response slowly or is not correct</b></p> <p>If the device has a touch screen but the touch screen response is not correct, please try the following:</p> <ul style="list-style-type: none"> <li>• Remove the touch screen of any protective film.</li> <li>• Please make sure that your fingers are dry and clean when you click the touch screen.</li> <li>• To remove any temporary software error, please restart the device.</li> <li>• If the touch screen is scratched or damaged, please contact seller.</li> </ul> <p><b>Device is frozen or severe mistake</b></p> <ul style="list-style-type: none"> <li>• If the device is frozen or hang, it may need to shut down the program or restart to regain the function. If the device is frozen or slow, hold down the power button for 6 seconds, then it will automatically restart.</li> </ul> <p><b>Can't find another Bluetooth device</b></p> <ul style="list-style-type: none"> <li>• To ensure that the device has started the Bluetooth wireless function.</li> <li>• Make sure that the distance between the two device is within the largest Bluetooth range(10m).</li> </ul>	<p><b>Use Notes</b></p> <p><b>The operating environment</b></p> <ul style="list-style-type: none"> <li>• Please do not use this device in the thunderstorm weather, because the thunderstorm weather may result in the equipment failure, or click the danger.</li> <li>• Please put the equipment from rain, moisture and liquids containing acidic substances, or it will make the electronic circuit boards corrosion.</li> <li>• Don't store the device in overheating, high temperature, or it will shorten the life of electronic devices.</li> <li>• Don't store the device in a too cold place, because when the device's temperature rises, moisture can form inside, and it might damage the circuit board.</li> <li>• Do not attempt to disassemble the device, non-professional personnel handling can damage it.</li> <li>• Do not throw, beat or intense crash the device, because rough treatment will destroy the device's parts, and it may cause the device failure.</li> </ul> <p><b>Children's health</b></p> <ul style="list-style-type: none"> <li>• Please put the device, its components and accessories in the place where children can't touch.</li> <li>• This device is not toys, so children should be under adult supervision to use it.</li> </ul> <p><b>The charger security</b></p> <ul style="list-style-type: none"> <li>• When charging the device, power sockets should be installed near the device and should be easy to hit. And the areas must be far away from the debris, flammable or chemicals.</li> <li>• Please do not fall or crash the charger. When the charger shell damaged, please ask the vendor for replacement.</li> <li>• If the charger or the power cord is damaged, please do not continue to use, so as to avoid electric shock or fire.</li> </ul>	<ul style="list-style-type: none"> <li>• Please do not use wet hand to touch the power cord, or with power supply cable way out the charger.</li> <li>• The charger must meet the "2.5 restricted power" in the request of the standard &lt;GB4943.1 information technology equipment safety</li> <li>• If the device needs to connect USB port, please make sure the SUB contains USB port – IF logo and its performance is in accordance with the relevant specification of the USB – IF.</li> </ul> <p><b>Repair and Maintenance</b></p> <ul style="list-style-type: none"> <li>• Don't use strong chemicals or powerful detergent to clean the device. If it is dirty, please use a soft cloth to clean the surface with a very dilute solution of glass cleaner.</li> <li>• Screen can be wiped with alcohol cloth, but be careful not to let the fluid accumulate around the screen. Dry the display with a soft non-woven cloth immediately, in order to prevent the screen from leaving the strip traces.</li> </ul>